






# Model 2008DHH 20% CO<sub>2</sub>

Gas in %	Output in volts	±5% of reading		4-20 mA output	±5% of reading		4-20 mA across 250Ω in volts
		Max.	Min.		Max.	Min.	
0.00	0.000	0.025	-0.025	4.00	4.40	3.60	1.00
0.40	0.020	0.045	-0.005	4.32	4.72	3.92	1.08
0.80	0.040	0.065	0.015	4.64	5.04	4.24	1.16
1.20	0.060	0.085	0.035	4.96	5.36	4.56	1.24
1.60	0.080	0.105	0.055	5.28	5.68	4.88	1.32
2.00	0.100	0.125	0.075	5.60	6.00	5.20	1.40
2.40	0.120	0.145	0.095	5.92	6.32	5.52	1.48
2.80	0.140	0.165	0.115	6.24	6.64	5.84	1.56
3.20	0.160	0.185	0.135	6.56	6.96	6.16	1.64
3.60	0.180	0.205	0.155	6.88	7.28	6.48	1.72
4.00	0.200	0.225	0.175	7.20	7.60	6.80	1.80
4.40	0.220	0.245	0.195	7.52	7.92	7.12	1.88
4.80	0.240	0.265	0.215	7.84	8.24	7.44	1.96
5.20	0.260	0.285	0.235	8.16	8.56	7.76	2.04
5.60	0.280	0.305	0.255	8.48	8.88	8.08	2.12
6.00	0.300	0.325	0.275	8.80	9.20	8.40	2.20
6.40	0.320	0.345	0.295	9.12	9.52	8.72	2.28
6.80	0.340	0.365	0.315	9.44	9.84	9.04	2.36
7.20	0.360	0.385	0.335	9.76	10.16	9.36	2.44
7.60	0.380	0.405	0.355	10.08	10.48	9.68	2.52
8.00	0.400	0.425	0.375	10.40	10.80	10.00	2.60
8.40	0.420	0.445	0.395	10.72	11.12	10.32	2.68
8.80	0.440	0.465	0.415	11.04	11.44	10.64	2.76
9.20	0.460	0.485	0.435	11.36	11.76	10.96	2.84
9.60	0.480	0.505	0.455	11.68	12.08	11.28	2.92
10.00	0.500	0.525	0.475	12.00	12.40	11.60	3.00
10.40	0.520	0.546	0.494	12.32	12.74	11.90	3.08
10.80	0.540	0.567	0.513	12.64	13.07	12.21	3.16
11.20	0.560	0.588	0.532	12.96	13.41	12.51	3.24
11.60	0.580	0.609	0.551	13.28	13.74	12.82	3.32
12.00	0.600	0.630	0.570	13.60	14.08	13.12	3.40
12.40	0.620	0.651	0.589	13.92	14.42	13.42	3.48
12.80	0.640	0.672	0.608	14.24	14.75	13.73	3.56
13.20	0.660	0.693	0.627	14.56	15.09	14.03	3.64
13.60	0.680	0.714	0.646	14.88	15.42	14.34	3.72
14.00	0.700	0.735	0.665	15.20	15.76	14.64	3.80
14.40	0.720	0.756	0.684	15.52	16.10	14.94	3.88
14.80	0.740	0.777	0.703	15.84	16.43	15.25	3.96
15.20	0.760	0.798	0.722	16.16	16.77	15.55	4.04
15.60	0.780	0.819	0.741	16.48	17.10	15.86	4.12
16.00	0.800	0.840	0.760	16.80	17.44	16.16	4.20
16.40	0.820	0.861	0.779	17.12	17.78	16.46	4.28
16.80	0.840	0.882	0.798	17.44	18.11	16.77	4.36
17.20	0.860	0.903	0.817	17.76	18.45	17.07	4.44
17.60	0.880	0.924	0.836	18.08	18.78	17.38	4.52
18.00	0.900	0.945	0.855	18.40	19.12	17.68	4.60
18.40	0.920	0.966	0.874	18.72	19.46	17.98	4.68
18.80	0.940	0.987	0.893	19.04	19.79	18.29	4.76
19.20	0.960	1.008	0.912	19.36	20.13	18.59	4.84
19.60	0.980	1.029	0.931	19.68	20.46	18.90	4.92
20.00	1.000	1.050	0.950	20.00	20.80	19.20	5.00


Accuracy = ±5% of reading from 10% CO<sub>2</sub> to 20% and ±0.5% CO<sub>2</sub> from 0 to 10% CO<sub>2</sub>

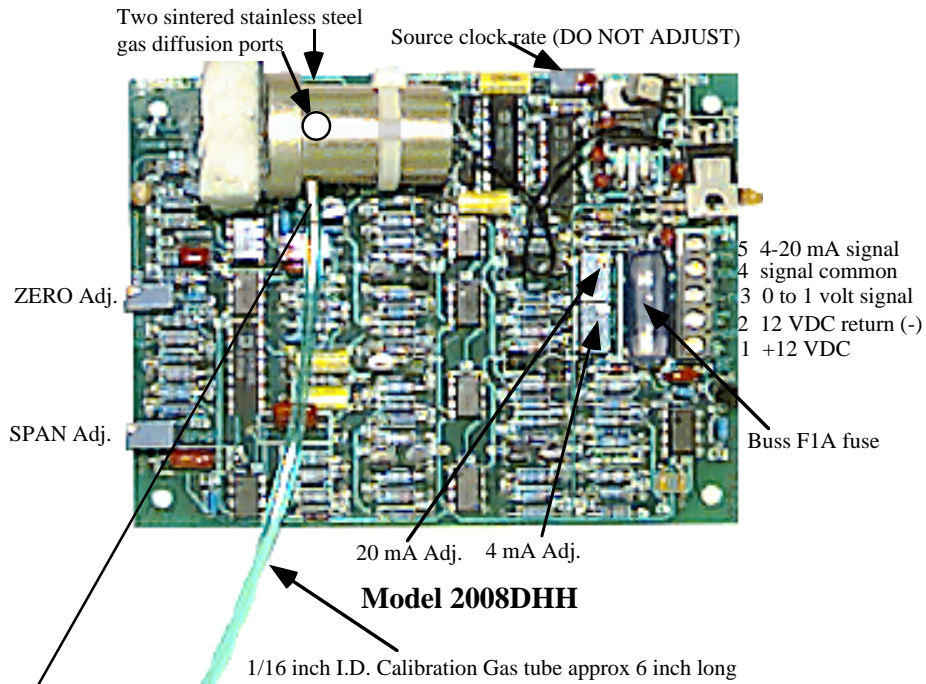


The gas calibration hose barb ZERO and SPAN. Fresh air ZERO potentiometer. A tank of oil or particles into the gas cell. that all water droplets, oil, and ml/min to avoid pressurizing the gas cell. Certified 10.0±0.2% CO<sub>2</sub> should be used to adjust the SPAN potentiometer. A span gas concentration near mid-scale (10.0%) will give better accuracy near that point. See Application Note A25 for more detailed calibration instructions. Valtronics will supply complete gas calibration kits upon request.

(for 1/16 inch ID tubing) should be used every six to twelve months to adjust the with about 400 ppm (0.04%) CO<sub>2</sub> would be OK as a zero gas and to adjust the dry nitrogen would be better because you would be sure that you do not pump any This calibration port should not be used as a gas sample port unless you are sure dust particles are removed from that sample. The flow rate should not exceed 300 ml/min to avoid pressurizing the gas cell. Certified 10.0±0.2% CO<sub>2</sub> should be used to adjust the SPAN potentiometer. A span gas concentration near mid-scale (10.0%) will give better accuracy near that point. See Application Note A25 for more detailed calibration instructions. Valtronics will supply complete gas calibration kits upon request.

### Circuit Side

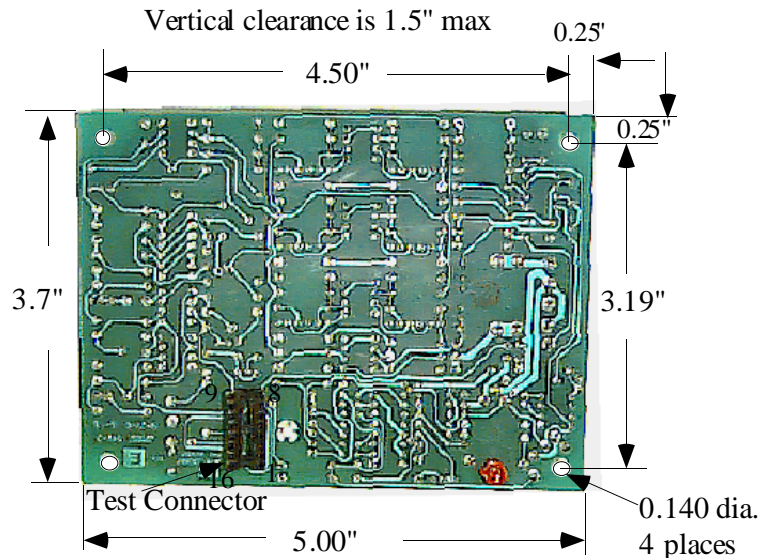

The following diagram is a symbolic representation of the interface terminal block TB1 (J1 on some 2008 units) and connections made to it. It shows why it is important to use a minimum of four (4) wires to operate it. If you use the 4 to 20 mA current loop output (pins 5 and 4), please remember that it will not drive more than about 300 ohms total resistance in that current loop. This is because the current loop's amplifier is powered from 8 volts DC. The full scale output of 20 mA multiplied by the loop resistance of 300 ohms results in an output voltage of 6.0 volts. Greater than 6 volts may not be reliably produced given worst case component tolerances and temperature conditions.

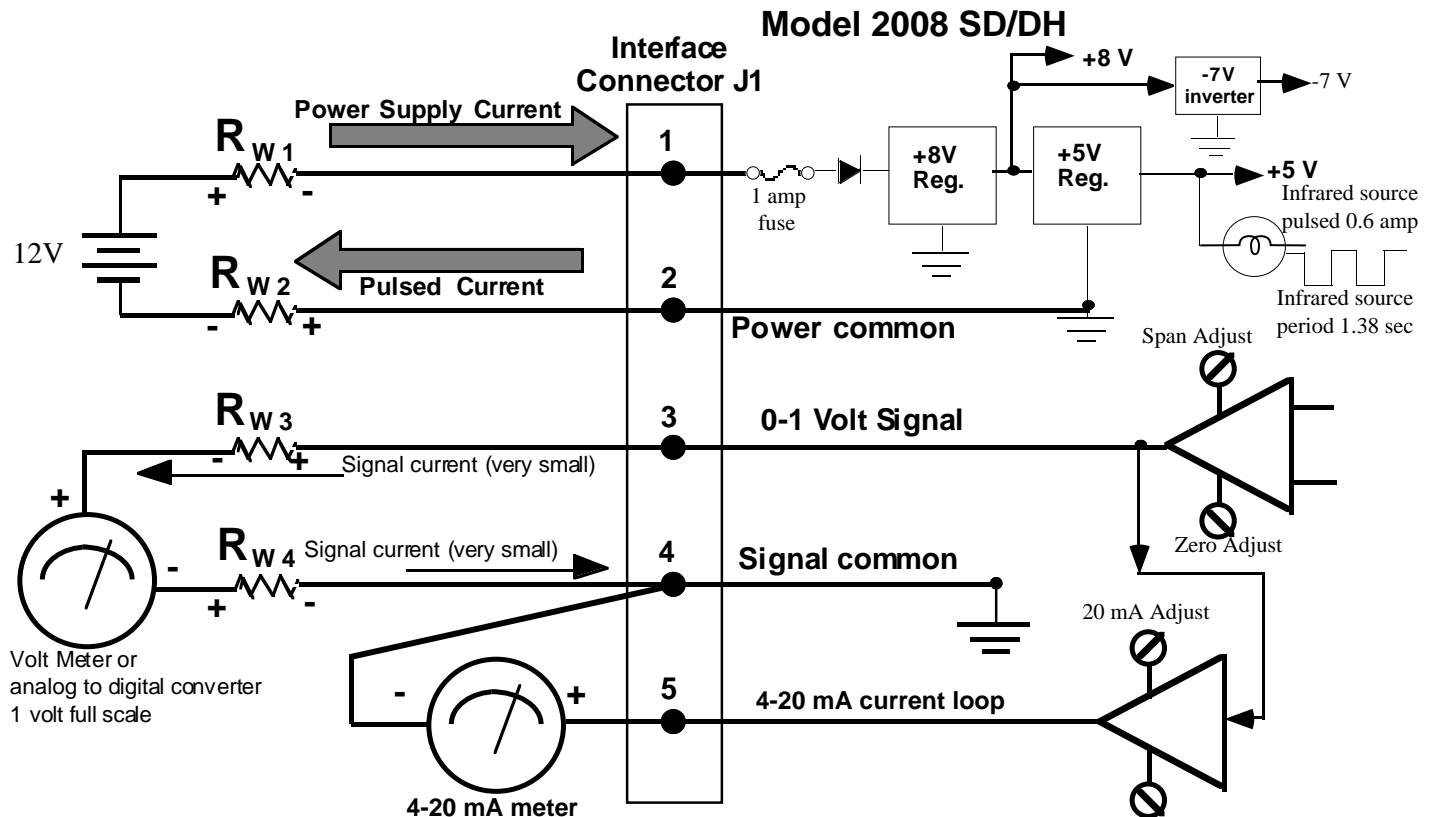

The pulsating power supply return current will take the path of least resistance. If the wire from pin# 2 is of a large diameter and short, the current will travel through it and not in the signal path which would introduce noise. The SIGNAL COMMON must have a separate wire for signal current to flow through. There must be a minimum of four (4) wires. A three (3) wire connection where one wire is used for both power supply and signal common will not work well even with the current loop. The current loop will compensate for wire resistance but it takes a few seconds to do that since we filter its response to about 10 seconds. The voltage produced across the wire resistance  $R_w$ , (source current of about 0.6 amp peak times the wire resistance) every 1.38 seconds will appear as noise.

Units are delivered gas calibrated at an elevation of about 700 ft. and 23°C (see Application Note A12). We will custom calibrate for special altitudes upon request. Calibration adjustments made to the ZERO potentiometer R11 and SPAN potentiometer R22 should only be done using certified (at least  $\pm 2\%$  of reading) calibration gas. Please refer to your manual and **VALTRONICS** Application Note A25 for detailed gas calibration instructions. Adjustments made to the 4 mA potentiometer R64 and the 20 mA potentiometer R63 should only be done after R11 and R22 are properly adjusted.