



Carbon Dioxide Monitor

Model 2166 10% CO₂

Features:

- Complete self contained units
- Non dispersive infrared (NDIR) technology
- Precision gas calibration kit available
- Fast warm-up
- Industrially robust: 0-5 V and 4-20 mA outputs
- Dual level detect set points and relays
- Cost effective - High quality
- Sample draw system with pump switch for calib.
- Solid state throughout - linear outputs
- Humidity and moisture resistant
- Dust-tight water resistant fiberglass enclosure
- Digital readout with 0.56 inch **RED LED** display

Model 2166 10% CO₂

GREEN Power
ON Indicator



YELLOW Low Limit
Exceeded Indicator

RED
High Limit
Exceeded
Indicator



audio alarm
with switch
to disable
inside

115VAC or 230 VAC power cord options see page 4
Cable grommet for signal wires 0.090 min / 0.25 max wire
dia. Remove **blue cap** on exhaust gas hose barb.

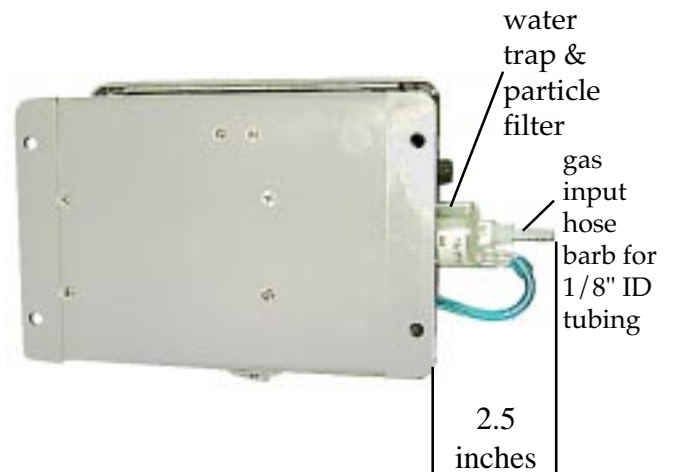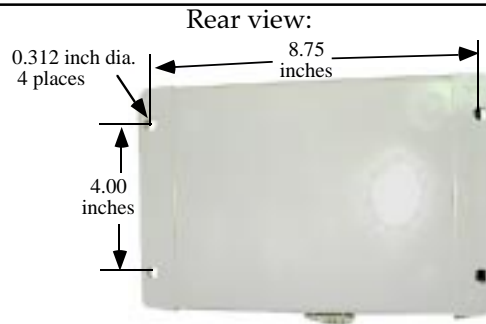

Overall Clearance: 5 x 7.5 x 13 inches
including the water trap and 1/8" hose barb

Application:

- Industrial Safety
- Process Control
- Wineries
- Breweries
- Food Processing
- with CO₂ Blasters

The **VALTRONICS** Model 2166 is a non-dispersive infrared (**NDIR**) carbon dioxide monitor for use as an outdoor air sensor. It produces a control signal proportional to carbon dioxide concentration. This control signal is then used to provide remote control of the outdoor air dampers; thereby controlling the fresh air intake or varying the ventilation rates while maintaining safe indoor air quality. Dual adjustable level detect circuits may be used for alarms.



Carbon Dioxide Monitor

Model 2166 10% CO₂

Description:

The Model 2166 is a non-dispersive infrared gas monitor designed as a fully functioning stand-alone unit for the continuous monitoring of carbon dioxide. The optical system is not effected by humidity. The pumped gas sampling circuit has a self-draining water trap. This eliminates difficulties with water condensation in the sample lines. It has a 0.56 inch high digital readout and two adjustable level detect circuits with associated front panel indicators (yellow and red) and SPDT relay contacts.

This low power, water resistant system makes this an ideal remote sensor to interface with any central control unit. It has linear 0 to 5 volt and 4 to 20 mA current loop outputs. In either configuration, interfaced or stand-alone, this device is an excellent choice for any environment in which the level of carbon dioxide must be monitored or controlled.

Specifications: 2166 10% CO₂

Method: **N.D. I. R.** (Non-dispersive Infra-red) Gas sample pump (see **app note A67**)
Gas: Carbon dioxide (CO₂)
Range: 0-100,000 ppm (10.0%) CO₂
Accuracy: ±0.25% CO₂ from 0 -5% CO₂ and ± 5% of reading from 5% to 10% CO₂
Repeatability: ± 1% of full scale (challenge with same gas sample and assure zero)
External Power Source: 115/230 VAC , 50/60 Hz (jumper selectable) **see page 4**
Power Consumption: less than 8 watts @ 115 VAC
Adjustable Set Points: Dual set points adjustable from 1% CO₂ to full scale (audio alarms below)
..... Low SET Point adjusted to 3.0% and High SET Point to 5.0% unless specified on PO
SET POINT Relay Contact Rating: ... SPDT contacts: non-latching N.C., N.O. 3 amp max. at 250 VAC or 30 VDC
Display: 0.56 inch high digital Light Emitting Diode (LED) readout
Output Signals:
Voltage: 0 to 5 volt = 0 to 10% CO₂ (linear scale data attached)
Current Loop: 4 to 20 mA = 0 to 10% CO₂ (linear scale data attached) 0 to 550Ω load
Audio Alarms: Beeps once a second when Low SET Point is exceeded, continuous when High exceeded
Set Point Indicators: Yellow flashes when Low SET Point is exceeded, RED on continuous when High exceeded
Zero Drift at Constant Temperature: Less than 2% of full scale per month (random not cumulative)
Zero Noise at Constant Temperature: Less than 50 mV peak to peak measured during any 20 second period
..... measured on voltage output (equals less than 1% of full scale)
Zero Drift due to Ambient Temperature: Less than 0.5% of full scale per degree Centigrade
Operating Temperature Range: .. 0 to 50°C (32° to 122°F) see **Application Note A12**
Storage Temperature Range: -40 to +70°C (-40 to +158°F)
Operating Humidity Range: 5 to 95% RH (non-condensing) in gas cell, see **Application Note A30**
Weight: Less than 6 pounds (< 2.72 kilograms)
External Clearance Dimensions: . 5 inches high, 7.5 inches wide, 13 inches long (including 3.5" water trap)
Mounting, four 0.312 inch dia holes ... Mounting centers 4.0 inch x 8.75 inch: see diagram




Terminal block TB1 has a linear 0 to 5 volt output signal on pin number 9 with respect to pin number 8 which is signal common. Pin number 7 has a linear 4 to 20 mA current loop signal referenced again to pin number 8. See the wiring diagram on page 4.

The table below shows both the linear 0 to 5 volt and the 4 to 20 mA current loop responses to 0 to 10% carbon dioxide being drawn through the gas cell by the sample pump. The wires from TB1 go through the strain relief cable grommet shown on page 4. The resulting wire bundle must be between 0.090 and 0.25 inch diameter to be properly strain relieved.

VALTRONICS 10% & 5 volt full scale

Gas in %	Output in volts	±5% of reading		Output 4-20 mA	±5% of reading	
		Max	Min		Max	Min
0.00	0.000	0.125	-0.125	4.00	4.40	3.60
0.20	0.100	0.225	-0.025	4.32	4.72	3.92
0.40	0.200	0.325	0.075	4.64	5.04	4.24
0.60	0.300	0.425	0.175	4.96	5.36	4.56
0.80	0.400	0.525	0.275	5.28	5.68	4.88
1.00	0.500	0.625	0.375	5.60	6.00	5.20
1.20	0.600	0.725	0.475	5.92	6.32	5.52
1.40	0.700	0.825	0.575	6.24	6.64	5.84
1.60	0.800	0.925	0.675	6.56	6.96	6.16
1.80	0.900	1.025	0.775	6.88	7.28	6.48
2.00	1.000	1.125	0.875	7.20	7.60	6.80
2.20	1.100	1.225	0.975	7.52	7.92	7.12
2.40	1.200	1.325	1.075	7.84	8.24	7.44
2.60	1.300	1.425	1.175	8.16	8.56	7.76
2.80	1.400	1.525	1.275	8.48	8.88	8.08
3.00	1.500	1.625	1.375	8.80	9.20	8.40
3.20	1.600	1.725	1.475	9.12	9.52	8.72
3.40	1.700	1.825	1.575	9.44	9.84	9.04
3.60	1.800	1.925	1.675	9.76	10.16	9.36
3.80	1.900	2.025	1.775	10.08	10.48	9.68
4.00	2.000	2.125	1.875	10.40	10.80	10.00
4.20	2.100	2.225	1.975	10.72	11.12	10.32
4.40	2.200	2.325	2.075	11.04	11.44	10.64
4.60	2.300	2.425	2.175	11.36	11.76	10.96
4.80	2.400	2.525	2.275	11.68	12.08	11.28
5.00	2.500	2.625	2.375	12.00	12.40	11.60
5.20	2.600	2.730	2.470	12.32	12.74	11.90
5.40	2.700	2.835	2.565	12.64	13.07	12.21
5.60	2.800	2.940	2.660	12.96	13.41	12.51
5.80	2.900	3.045	2.755	13.28	13.74	12.82
6.00	3.000	3.150	2.850	13.60	14.08	13.12
6.20	3.100	3.255	2.945	13.92	14.42	13.42
6.40	3.200	3.360	3.040	14.24	14.75	13.73
6.60	3.300	3.465	3.135	14.56	15.09	14.03
6.80	3.400	3.570	3.230	14.88	15.42	14.34
7.00	3.500	3.675	3.325	15.20	15.76	14.64
7.20	3.600	3.780	3.420	15.52	16.10	14.94
7.40	3.700	3.885	3.515	15.84	16.43	15.25
7.60	3.800	3.990	3.610	16.16	16.77	15.55
7.80	3.900	4.095	3.705	16.48	17.10	15.86
8.00	4.000	4.200	3.800	16.80	17.44	16.16
8.20	4.100	4.305	3.895	17.12	17.78	16.46
8.40	4.200	4.410	3.990	17.44	18.11	16.77
8.60	4.300	4.515	4.085	17.76	18.45	17.07
8.80	4.400	4.620	4.180	18.08	18.78	17.38
9.00	4.500	4.725	4.275	18.40	19.12	17.68
9.20	4.600	4.830	4.370	18.72	19.46	17.98
9.40	4.700	4.935	4.465	19.04	19.79	18.29
9.60	4.800	5.040	4.560	19.36	20.13	18.59
9.80	4.900	5.145	4.655	19.68	20.46	18.90
10.00	5.000	5.250	4.750	20.00	20.80	19.20



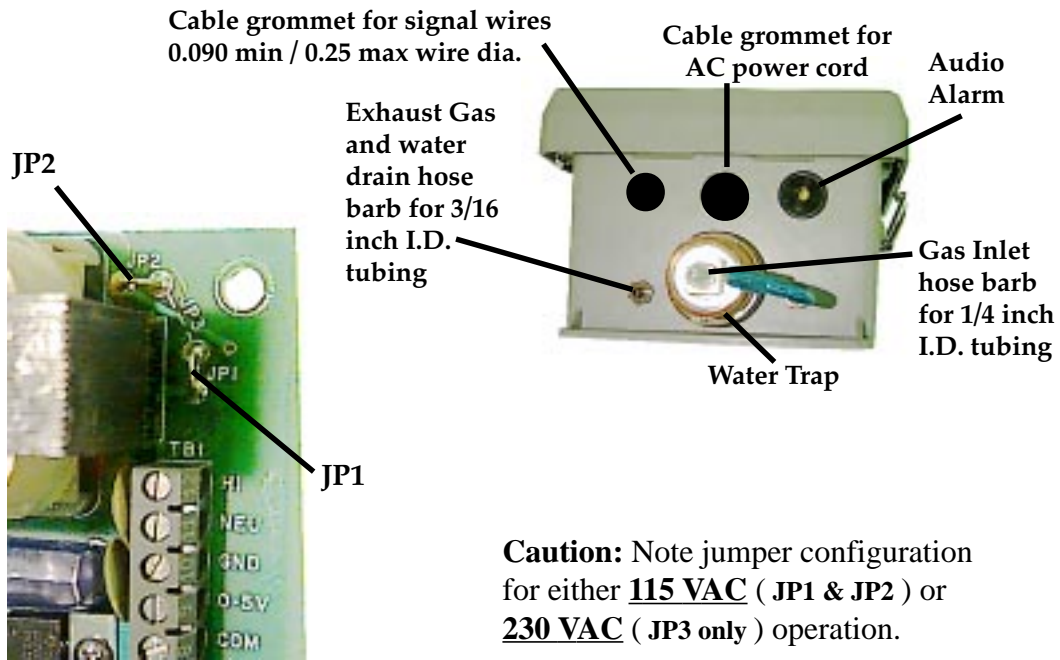

Preventive Maintenance:

Gas calibration should be done every six months. At least calibration with zero gas (nitrogen) every six months and both zero and span (certified $5 \pm 0.1\% \text{ CO}_2$) at least once a year. A calibration log book where you record how much ZERO and SPAN had drifted before it was recalibrated will help you decide what the optimum duration between calibrations should be. See **Application Note A24** for detailed calibration instructions. The **pump switch should be turned OFF** during calibration and the flow rate set to about 1 to 2 Liters per minute or as low as 0.3 LPM if you flow directly into the Hydrophobic Filter (See **Application Note A73**).

The filter in the water trap and the hydrophobic / particle filter inside should inspected and changed when necessary. The flow rate of the pump should be checked to see if it is still operating properly. It should be about 3 to 5 liters per minute if measured at the water trap input, Gas Inlet (both sides of the pump drawing). See **Application Note A67** for spare parts information. See **Application Note A46** for detailed PC board functions and locations of all adjustment potentiometers.

