


# Carbon Dioxide Monitor Model 2166 5% CO<sub>2</sub>

## Features:

- Complete self contained units
- Non dispersive infrared (NDIR) technology
- Precision gas calibration kit available
- Fast warm-up
- **Linear 0-5 V and 4-20 mA** outputs
- Dual level detect set points and relays
- **Green Power Indicator**
- 115/230 volt, 50/60 Hz Operation
- Cost effective - High quality
- Sample draw system with pump switch for calib.
- Solid state throughout - linear outputs
- Humidity and moisture resistant - Water Trap
- Dust-tight water resistant fiberglass enclosure
- Digital readout with 0.56 inch red LED display
- **Yellow and Red Limit Exceeded Indicators**
- Audible Alarm with switch to diasble

## Model 2166 5% CO<sub>2</sub>

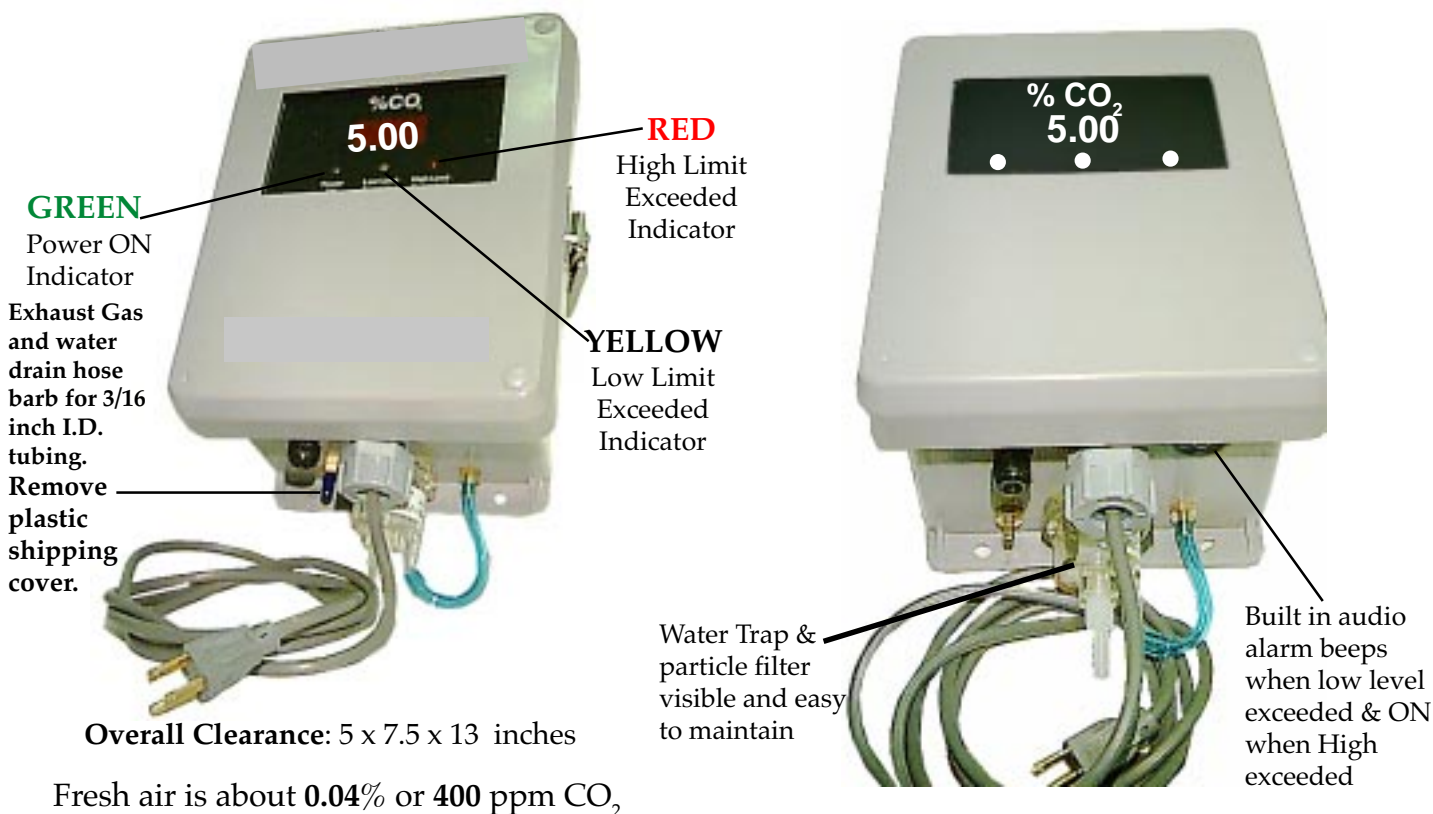

## Application:

- Industrial Safety
- Process Control
- Wineries
- Breweries
- Food Processing
- with CO<sub>2</sub> Blasters

The VALTRONICS Model 2166 is a non-dispersive infrared (NDIR) carbon dioxide monitor for use as an outdoor air sensor. It produces a control signal proportional to carbon dioxide concentration. This control signal is then used to provide remote control of the outdoor air dampers; thereby controlling the fresh air intake or varying the ventilation rates while maintaining safe indoor air quality. Dual adjustable level detect circuits may be used for alarms.



# Carbon Dioxide Monitor

## Model 2166 5% CO<sub>2</sub>

---

### Description:

---

The Model 2166 is a non dispersive infrared gas monitor designed as a fully functioning stand-alone unit for the continuous monitoring of carbon dioxide. The optical system is not effected by humidity. The pumped gas sampling circuit has a self-draining water trap. This eliminates difficulties with water condensation in the sample lines. It has a 0.56 inch high digital readout and two adjustable level detect circuits with associated front panel indicators (yellow and red) and SPDT relay contacts.

This low power, water resistant system makes this an ideal remote sensor to interface with any central control unit. It has linear 0 to 5 volt and 4 to 20 mA current loop outputs. In either configuration, interfaced or stand-alone, this device is an excellent choice for any environment in which the level of carbon dioxide must be monitored or controlled.

---

### Specifications: 2166 5% CO<sub>2</sub>

---

Method: ..... N.D. I. R. (Non-dispersive Infra-red) Gas sample pump (see **app note A67**)  
Gas: ..... Carbon dioxide (CO<sub>2</sub>)  
Range: ..... 0-50,000 ppm (5.0%) CO<sub>2</sub>  
Accuracy: ..... ±0.13% CO<sub>2</sub> from 0 -2.5% CO<sub>2</sub> and ± 5% of reading from 2.5% to 5% CO<sub>2</sub>  
Repeatability: ..... ± 1% of full scale (challenge with same gas sample and assure zero )  
External Power Source: ..... 115/220 VAC , 50/60 Hz  
Power Consumption: ..... less than 8 watts @ 115 VAC  
Adjustable Set Points: ..... Dual set points adjustable from 0.5% CO<sub>2</sub> to full scale (audio alarms below)  
..... Low SET Point adjusted to 1.0% and High SET Point to 3.0% unless specified on PO  
SET POINT Relay Contact Rating: ... SPDT contacts: non-latching N.C., N.O. 3 amp max. at 250 VAC or 30 VDC  
Display: ..... 0.56 inch high digital Light Emitting Diode (LED) readout  
Output Signals:  
Voltage: ..... 0 to 5 volt = 0 to 5% CO<sub>2</sub> ( **linear** scale data attached)  
Current Loop: ..... 4 to 20 mA = 0 to 5% CO<sub>2</sub> ( **linear** scale data attached) 0 to 550Ω load  
Audio Alarms: ..... Beeps once a second when Low SET Point is exceeded, continuous when High exceeded  
Set Point Indicators: ..... Yellow flashes when Low SET Point is exceeded, RED on continuous when High exceeded  
Zero Drift at Constant Temperature: ..... Less than 2% of full scale per month (random not cumulative)  
Zero Noise at Constant Temperature: ..... Less than 50 mV peak to peak measured during any 20 second period  
..... measured on voltage output (equals less than 1% of full scale)  
Zero Drift due to Ambient Temperature: Less than 0.5% of full scale per degree Centigrade  
Operating Temperature Range: .. 0 to 50°C (32° to 122°F) see **Application Note A12**  
Storage Temperature Range: ..... -40 to +70°C (-40 to +158°F)  
Operating Humidity Range: ..... 5 to 95% RH (non-condensing) in gas cell  
Weight: ..... Less than 6 pounds (< 2.72 kilograms)  
External Clearance Dimensions: . 5 inches high, 7.5 inches wide, 13 inches long (including 3.5" water trap)  
Mounting, four 0.312 inch dia holes ... Mounting centers 4.0 inch x 8.75 inch: see diagram




Terminal block TB1 has a linear 0 to 5 volt output signal on pin number 9 with respect to pin number 8 which is signal common. Pin number 7 has a linear 4 to 20 mA current loop signal referenced again to pin number 8. See the wiring diagram on page 4.


The table below shows both the linear 0 to 5 volt and the 4 to 20 mA current loop responses to 0 to 5% carbon dioxide being drawn through the gas cell by the sample pump. The wires from TB1 go through the strain relief cable grommet shown on page 4. The resulting wire bundle must be between 0.090 and 0.25 inch diameter to be properly strain relieved.

**VALTRONICS** 5% Gas & 5 volt full scale

Gas in %	Output in volts	±5% of Reading		4-20 mA output	±5% of Reading		4-20 mA across 500Ω in volts
		Max.	Min.		Max.	Min.	
0.00	0.0	0.13	-0.13	4.00	4.40	3.60	2.00
0.10	0.1	0.23	-0.03	4.32	4.72	3.92	2.16
0.20	0.2	0.33	0.08	4.64	5.04	4.24	2.32
0.30	0.3	0.43	0.18	4.96	5.36	4.56	2.48
0.40	0.4	0.53	0.28	5.28	5.68	4.88	2.64
0.50	0.5	0.63	0.38	5.60	6.00	5.20	2.80
0.60	0.6	0.73	0.48	5.92	6.32	5.52	2.96
0.70	0.7	0.83	0.58	6.24	6.64	5.84	3.12
0.80	0.8	0.93	0.68	6.56	6.96	6.16	3.28
0.90	0.9	1.03	0.78	6.88	7.28	6.48	3.44
1.00	1.0	1.13	0.88	7.20	7.60	6.80	3.60
1.10	1.1	1.23	0.98	7.52	7.92	7.12	3.76
1.20	1.2	1.33	1.08	7.84	8.24	7.44	3.92
1.30	1.3	1.43	1.18	8.16	8.56	7.76	4.08
1.40	1.4	1.53	1.28	8.48	8.88	8.08	4.24
1.50	1.5	1.63	1.38	8.80	9.20	8.40	4.40
1.60	1.6	1.73	1.48	9.12	9.52	8.72	4.56
1.70	1.7	1.83	1.58	9.44	9.84	9.04	4.72
1.80	1.8	1.93	1.68	9.76	10.16	9.36	4.88
1.90	1.9	2.03	1.78	10.08	10.48	9.68	5.04
2.00	2.0	2.13	1.88	10.40	10.80	10.00	5.20
2.10	2.1	2.23	1.98	10.72	11.12	10.32	5.36
2.20	2.2	2.33	2.08	11.04	11.44	10.64	5.52
2.30	2.3	2.43	2.18	11.36	11.76	10.96	5.68
2.40	2.4	2.53	2.28	11.68	12.08	11.28	5.84
2.50	2.5	2.63	2.38	12.00	12.40	11.60	6.00
2.60	2.6	2.73	2.47	12.32	12.74	11.90	6.16
2.70	2.7	2.84	2.57	12.64	13.07	12.21	6.32
2.80	2.8	2.94	2.66	12.96	13.41	12.51	6.48
2.90	2.9	3.05	2.76	13.28	13.74	12.82	6.64
3.00	3.0	3.15	2.85	13.60	14.08	13.12	6.80
3.10	3.1	3.26	2.95	13.92	14.42	13.42	6.96
3.20	3.2	3.36	3.04	14.24	14.75	13.73	7.12
3.30	3.3	3.47	3.14	14.56	15.09	14.03	7.28
3.40	3.4	3.57	3.23	14.88	15.42	14.34	7.44
3.50	3.5	3.68	3.33	15.20	15.76	14.64	7.60
3.60	3.6	3.78	3.42	15.52	16.10	14.94	7.76
3.70	3.7	3.89	3.52	15.84	16.43	15.25	7.92
3.80	3.8	3.99	3.61	16.16	16.77	15.55	8.08
3.90	3.9	4.10	3.71	16.48	17.10	15.86	8.24
4.00	4.0	4.20	3.80	16.80	17.44	16.16	8.40
4.10	4.1	4.31	3.90	17.12	17.78	16.46	8.56
4.20	4.2	4.41	3.99	17.44	18.11	16.77	8.72
4.30	4.3	4.52	4.09	17.76	18.45	17.07	8.88
4.40	4.4	4.62	4.18	18.08	18.78	17.38	9.04
4.50	4.5	4.73	4.28	18.40	19.12	17.68	9.20
4.60	4.6	4.83	4.37	18.72	19.46	17.98	9.36
4.70	4.7	4.94	4.47	19.04	19.79	18.29	9.52
4.80	4.8	5.04	4.56	19.36	20.13	18.59	9.68
4.90	4.9	5.15	4.66	19.68	20.46	18.90	9.84
5.00	5.0	5.25	4.75	20.00	20.80	19.20	10.00

Accuracy = ± 0.13 % CO2 from 0.0% CO2 to 2.5% CO2  
 Accuracy = ±5% of reading from 2.5% CO2 to 5.0% CO2  
 Chart revised on 10-8-97

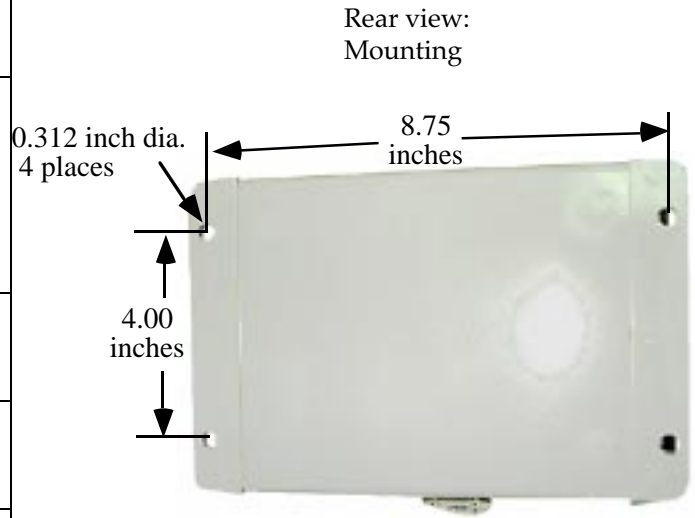

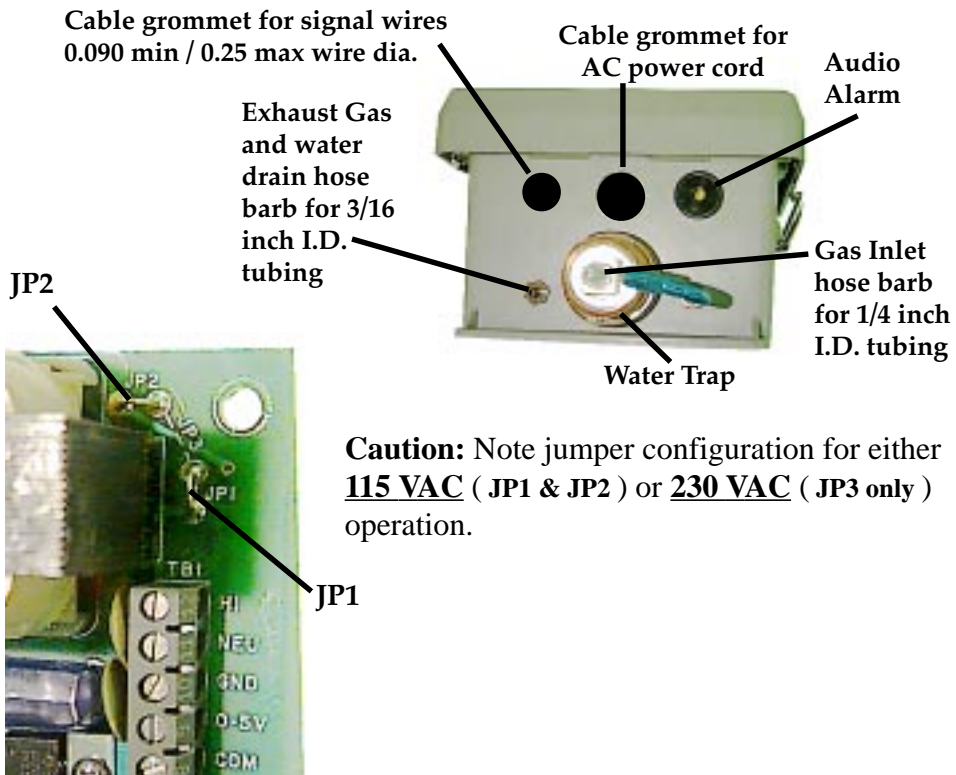

**Preventive Maintenance:**

Gas calibration should be done every six months. At least calibration with zero gas (nitrogen or fresh air) every six months and both zero and span (certified 1% or 2% CO<sub>2</sub>) at least once a year. A calibration log book where you record how much ZERO and SPAN had drifted before it was recalibrated will help you decide what the optimum duration between calibrations should be.

See **Application Note A24 & A73** for detailed calibration instructions. The **pump switch** should be **turned off** during gas calibration and the flow rate set to about 1 to 2 LPM if into the water trap but only about 0.5 LPM if directly into the hydrophobic filter (see **App Note A73** ). The filter in the water trap and the hydrophobic / particle filter inside should inspected and changed when necessary. The flow rate of the pump should be checked to see if it is still operating properly. It should be about 3 to 5 liters per minute if measured at the water trap input, Gas Inlet (both sides of the pump drawing). See **Application Note A67** for spare parts information. See **Application Note A46** for detailed info on PC board.

